

SZ:143\*210MM K

材质：封（面底）250G铜版纸

内页80G书纸

装订：骑马钉

Wireless Cascade Speakerphone

---

User Manual



# Notice

This manual describes in detail the function, installation and operation of the general principles and methods of the equipment. Please read this manual carefully before installation and use.

## 1.How to Use

To prevent damage to this product or any product connected to it, this product can only be used within the specified range.

1.1 Do not expose the product to rain or moisture.

1.2 To prevent the risk of electric shock, do not open the case.

Installation and maintenance should only be carried out by qualified technicians.

1.3 Do not use the product beyond the specified temperature, humidity or power supply specifications.

## 2.Electrical Safety

Installation and use of this product must strictly comply with local electrical safety standards.

## 3.Handle with care

Avoid damage to the product caused by heavy pressure, strong vibration or immersion during transportation, storage and installation.

## 4.Install with Caution

4.1 Housing of this product is made of organic materials. Do not expose it to any liquid, gas or solids which may corrode the shell.

4.2 Do not power on before completing installation.

## 5.Do not Disassemble the Product without Permission

 
This product contains no parts which can be maintained by the users themselves. Any damage caused by dismantling the product by the users without permission is not covered by warranty.

# Content


<b>Packing Contents</b>	<b>2</b>
1.1 Speakerphone	2
1.2 Parts List	2
1.3 Optional Accessories	2
<b>2. Interface and Display Instructions</b>	<b>3</b>
2.1 Hub (Optional)	3
<b>3. Introduction to Speakerphone</b>	<b>4</b>
3.1 The Master Keypad	4
3.2 Master LED Status Indicator	5
3.3 The Slave Keypad	6
3.4 Slave LED Status Indicator	7
<b>4. How to Use Speakerphone</b>	<b>8</b>
4.1 USB Connection Steps	8
4.2 Note: PC Common Reference Settings in USB Mode	9
4.3 Cascade	9
4.4 Wireless Cascade Connection Steps	10
<b>5. Installation and Use of Optional Hub</b>	<b>10</b>
<b>6. Technical Specifications</b>	<b>11</b>
<b>7. Warranty</b>	<b>12</b>

# Packing Contents

## Speakerphone

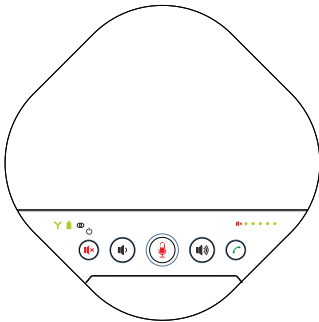


Master

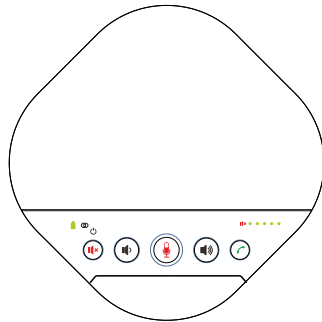 


slave

## Part List

 


USB cable X2

 

Power adapter X2




 User Manual




Wireless adapter


## Optional Accessories

 

Power Adapter

 


Hub

 


5m DIN6 data cable

If any accessories are missing or damaged, please contact the purchase immediately.  
Do not use damaged products!

## Interface and Display Instruction

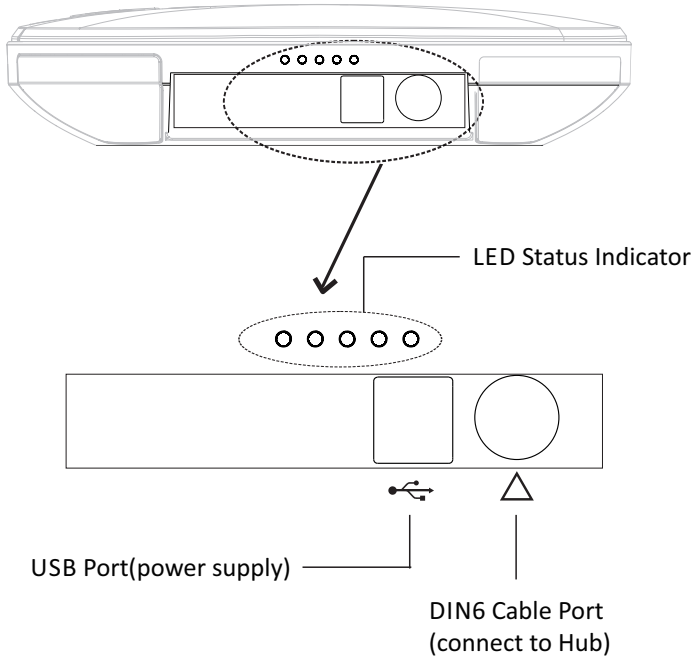 


## Hub (Optional)

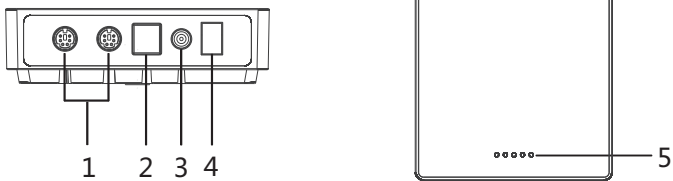 

- 1.DIN6 Cable port
- 2.USB port
- 3.Power port
- 4.Turn on/off
- 5.Status Indicator


# Introduction to Speakerphone
 
## The Master Keypad

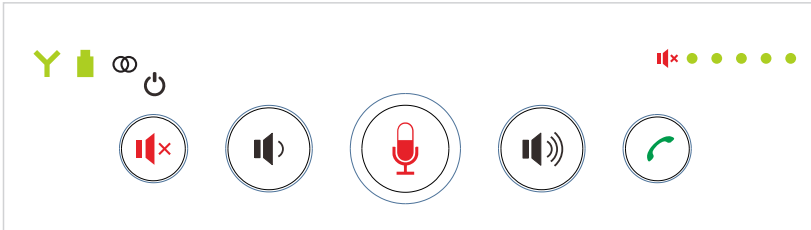

	Volume Button	Decrease/increase volume
	Speaker Mute	Short press turn on/off Speaker Mute button Long press 3 seconds to power on/off
	Answer/End call	Press the answer /end call button
	Mute microphone	Turn on/off mute microphone
	Eco Cancellation Mode	Press the answer/end calls button and microphone mute button at the same time for 4 seconds to enter/exit echo cancellation mode. Enter the echo cancellation mode , the blue light of the working status lamp will flash blue three times and exit flashes two times

### Master LED Status Indicator :

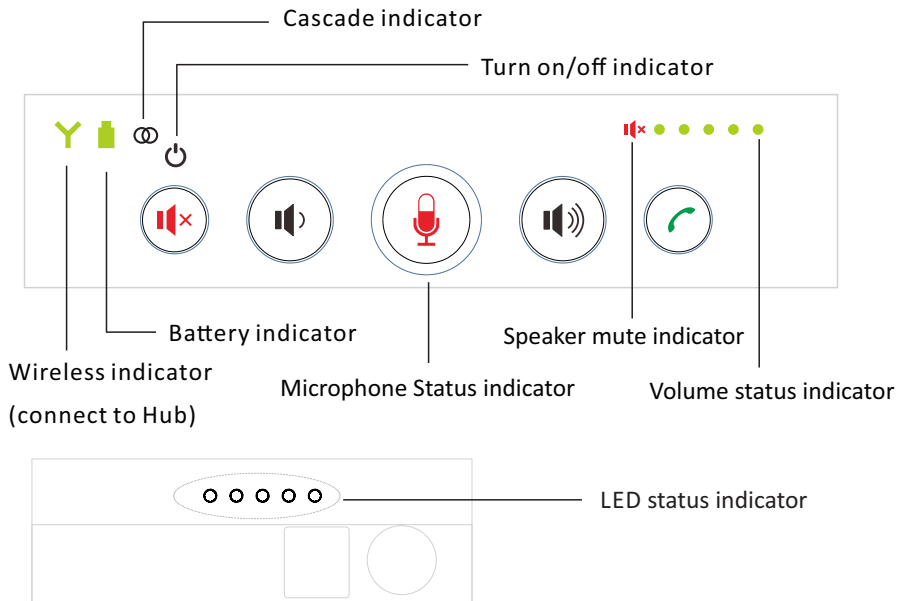 









Microphone status indicator	Red light on	Microphone mute status
	Green light on	Exit Microphone mute status
Speaker mute indicator	Red light on	Speaker mute status
Volume status indicator	Green light on	Current volume status
Cascade indicator	Green light on	Cascade connection
	Green light off	Cascade disconnection
	Red light on	In expansion mode. The cascade condition does not enter the dormant state (allowing cascading connection status)
	Red light flashing	In expansion mode. The cascade condition enter the dormant state. (not allow cascading connection status)

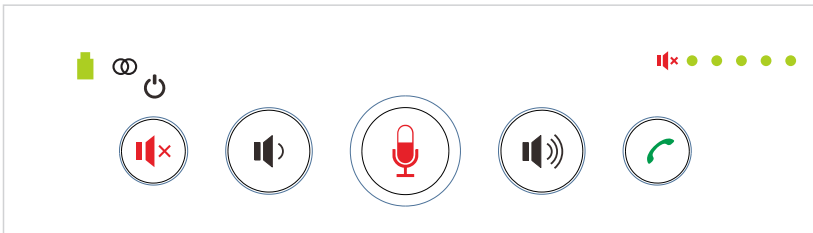 


Wireless indicator	Green light always on	Wireless connection
	Green light off	Wireless disconnection
Battery indicator	Green light off	Fully battery
	Green light flashing	charging
	Red light on	Low battery
LED Status indicator	Blue light on	USB connection
	Red light on	Microphone mute status

### The Slave Keypad



  	Volume Button	Decrease/increase volume
	Speaker Mute	Short press turn on/off Speaker Mute button Long press 3 seconds to power on/off
	Answer/End call	Press the answer /end call button
	Mute microphone	Turn on/off mute microphone (Long pressing for 3 seconds to enter expansion mode)
 + 	Eco Cancellation Mode	Press the answer/end calls button and microphone mute button at the same time for 4 seconds to enter/exit echo cancellation mode. Enter the echo cancellation mode , the blue light of the working status lamp will flash blue three times and exit flashes two times

## Slave LED Status Indicator :

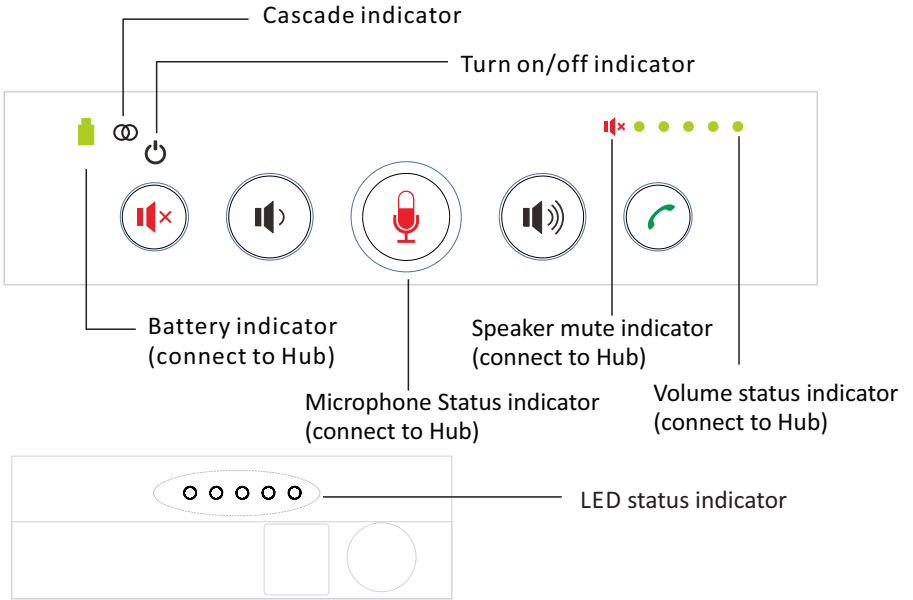

Microphone status indicator	Red light on	Microphone mute status
	Green light on	Exit Microphone mute status
Speaker mute indicator	Red light on	Speaker mute status
Volume status indicator	Green light on	Current volume status
Cascade indicator	Green light on	Cascade connection
	Green light off	Cascade disconnection
	Red light on	In expansion mode. The cascade condition does not enter the dormant state (allowing cascading connection status)
	Red light flashing	In expansion mode. The cascade condition enter the dormant state. (not allow cascading connection status)

Batteryindicator	Greenlightoff	Fullybattery
	flashing Greenlight	charging
	Redlighton	Low battery
LEDStatusindicator	Bluelighton	USBconnection
	Redlighton	Microphone mute status

## How to Use Speakerphone

### USB Connection Steps :

1. You can connect the power supply equipment with the original power adapter or connect one end of the USB cable to the USB port of the PC and video conference system, and connect the other end to the speakerphone.
2. You can connect the speakerphone and Hub(optional) by using the original DIN6 data cable, connect one end of the USB cable to the USB port of the PC or video conference system and connect the other end to the USB socket of the Hub (optional),and connect the power supply equipment with the original power adapter;
3. Turn on the power button after the connection was confirmed correct.And wait for the speakerphone self-check completed.
4. It will take a few seconds to install the driver automatically for the first setup. Turn on the terminal . Third-party conference software, and select the microphone and speaker driver to start the audio and video conference with the device.

### Battery charging instructions:

 
You can use DIN6 interface or USB interface of the speakerphone to charge. When the DIN6 interface and USB interface are used at the same time, the speakerphone is preferred to use DIN6 interface for charging.

**Note: PC Common Reference Settings in USB Mode**

1. Please adjust the volume of horns and microphones comprehensively to ensure the communication is clear and smooth.
2. Don't turn on the speaker and microphone automatic gain.
3. Give priority to turning off the audio processing functions of the PC software/video software (such as turning off automatic gain, echo cancellation, noise , reduction etc.)
4. Please use those speeches coding that has a higher sound quality as far as possible.

**Cascade**

This series has advanced cascade technology, which can be cascaded very conveniently. When it comes to meeting the need for longer collection distances and larger meeting rooms, it can be achieved through double cascading units. A single unit is suitable for a conference room around 30 square meters, and supports within 15 attendees. When two units are cascaded, it can be applied to a conference room of 60 square meters. The double wireless cascade speakerphone adopts advanced 5.8G wireless technology with its own wireless USB dongle. It is convenient to wireless cabling and audio equipment arrangement. The wireless signal coverage can reach 25 meters.

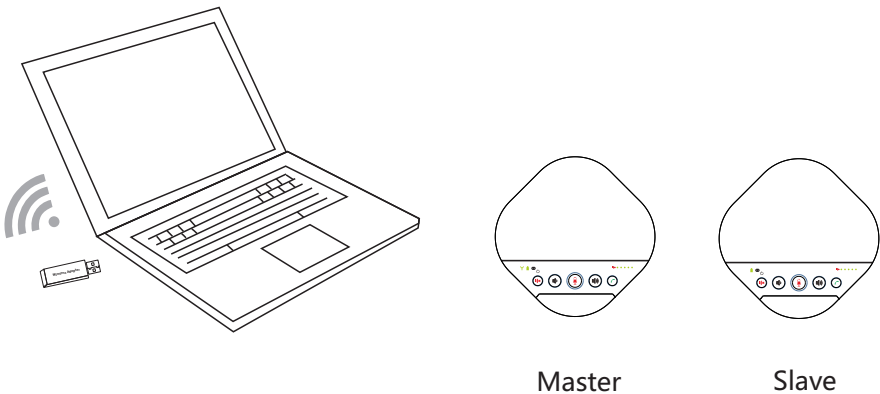

## Wireless Cascade Connection Steps :

1. Insert the wireless adapter to the USB port of the PC.
2. Turn on the master, after 5 seconds, the “Y” wireless indicator keep on green, indicating that the wireless connection is successful. Turn on the slave within 2 minutes after the master is turned on. Meanwhile, if the cascade indicator keep green light on, it’s successful on cascade connection. If there is no cascade connection within 2 minutes, the cascade will go into dormant state.
3. Wireless voice calls can now be made.

Note: If the device go into dormant state and it needs to be manually awakened. Pressing the microphone mute button for 3 seconds enters the expansion mode to check the dormant status of the module. In the expansion mode, if the cascade indicator on the master is flashing red, it means that the cascade mode on the master is in the dormant state, and it can be awakened by pressing the Answer/end call button. After waking up, the cascade indicator will be steady red. If the cascade indicator on the slave flashes red, it means that the cascade mode on the slave unit is in the dormant state at this time. It can be woken up by pressing the speaker mute button. After waking up, the cascade indicator light will be steady red.

## Installation and Use of Optional Hub

Please use a hub when you need a longer connection and power supply

1. Connect the speakerphone and Hub(optional) by using the original DIN6 data cable. And connect the power supply equipment with the original power adapter;
2. In the case of using the Hub, If you need to use the USB interface, you have to connect one end of the USB cable to the USB port of the Hub, and connect the other end to the USB port of the PC and video conference terminal.
3. Connect one end of the power adapter to the DC12V IN interface of the Hub, and plug the other end into a 100-240v AC power port. Turn on the power button after the connection was confirmed correct. And wait for the speakerphone self-check completed.

note:

When using a hub, do not connect one end of the USB cable to speakerphone and the other end to a PC, video terminal equipment or power adapter directly to avoid errors.

## Technical Specifications

Model NO.	Speakerphone
Voice Technical Parameters	Acoustic Echo cancellation(AEC)>65dB Echo length cancellation:≥500ms Bidirectional noise compression(NC):<25dB Automatic Direction finding Technology of Intelligent microphone(EMI) Automatic gain control(AGC)
Audio Parameters	Microphone frequency response:100Hz-22KHz Speaker frequency response:100Hz-22KHz Speaker volume: 90dB at the most Microphone sound-pickup radius: 5 meters, 360 degrees full range
Dimensions	180mm×180mm×42mm(L×W×H)
Model NO.	Hub (optional)
Interface	DIN6 ×2, Power interface×1; Power switch×1; USB Table B interface X 1
Power Supply	Power Plug (DC12V) Adapter input AC100V-AC240V, output DC12V/2A
Connection Cable	DIN6 data cable×1, length: 5 meters
USB Cable	USB cable , Length: 3 meters
Compatibility	Support Windows, Android, iOS, Linux system Driver-free automatic recognition of cameras, microphones and speakers Compatible with Zoom, Lynch, Vidyo, Skype for business and etc
Dimensions	113.6mm×113.6mm×32.6mm(L×W×H)

# Warranty

Warranty service is an important part in shopping.

Please refer to the company's website if the details and warranty period that not mentioned in the following contents.

## The warranty

Customers who purchase this product can enjoy the repair services in defective of materials and workmanship. By the way, the repair services excluded the terms listed below.

## Warranty period

The warranty period is one year from the date of sale.

During the warranty period, the warranty will not be given in the following conditions:

- A. The product is not stored, used in a reasonable manner or as suggested by the user's manual that cause damaged;
- B. Modify, change or use product with any modified kits, components or accessories not sold by us.
- C. The product is not installed according to relevant instructions in the user's manual.
- D. Ask others who not authorized by us to repair the product .
- E. Use those equipment, components or systems that not manufactured by us to connect with the product.

## The content of the warranty

This warranty applies to the product and all standard accessories, but does not include the paper items such as packaging and instructions.

## The procedures for obtaining warranty services

If the customer purchases a product that requires a warranty, not only can the customer receive the warranty service by mailing the QMC but also they can send the customer's purchase certificate (such as a copy of the sales invoice) to your QMC dealer.