



EACOME SPEAKERPHONE SV13W

USER MANUAL

CONTENTS

1. Welcome	1
EACOME professional speakerphone SV13W	1
2. Parts List	2
3. Getting to know your phone	3
3.1 Speakerphone overview	3
3.2 Keypad function	4
3.3 LED Indicator	5
4. How to use SV13W	6
4.1 Charging for preparation	6
4.2 Connecting PC via Wireless	7
4.3 Connection Steps for USB	8
4.4 IN/OUT Connection	9
4.5 Multi-party Conference Call & Line Mode Selection	10
4.6 Daisy Chain Function	11

5.Other functions	12
5.1 Checking the speaker volume level	12
5.2 Checking the Battery Level	12
6.How to care your EACOME speakerphone SV13W	13

1. WELCOME


Thank you for purchasing the EACOME professional speakerphone SV13W.
We hope you will enjoy it !

EACOME PROFESSIONAL SPEAKERPHONE SV13W

- Innovative and professional UC communicator for business video calls
- Ultra-wideband DSP processing delivers the great voice Quality
- Plug and play connectivity via USB and Line in/out
- Connect to your PC, tablet
- Compatible with Windows/MacOS and iOS/Android
- Compact and portable design
- User-friendly call controls and informations on the speakerphone

2. PARTS LIST

Included Accessories

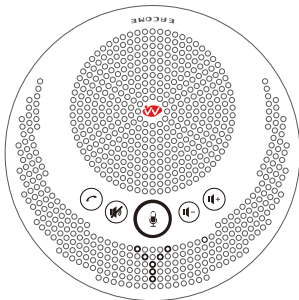

SV13W Phone



USB Cable



2.4G wireless





4-Strand 3.5mm Cable × 1







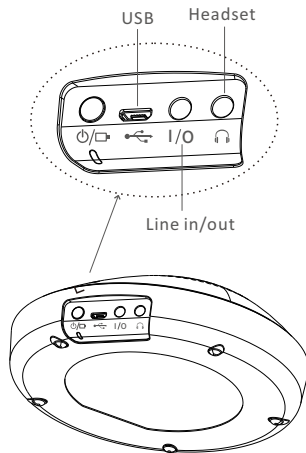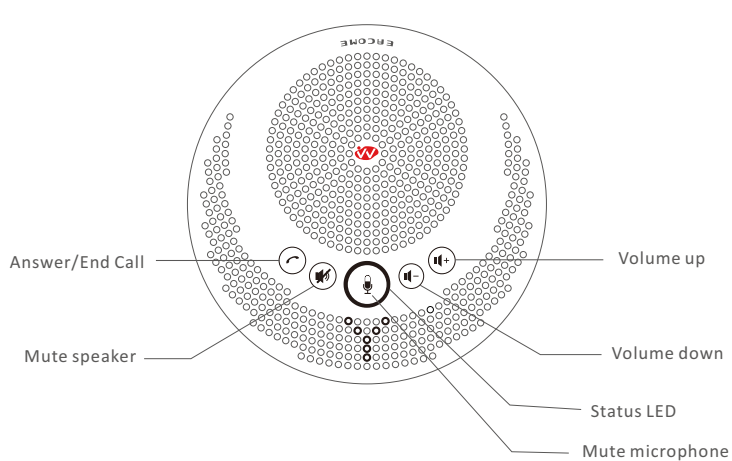


User Manual

3. GETTING TO KNOW YOUR PHONE

3.1 Speakerphone Overview



3.2 Keypad Function

	Answer/End call	Press the Answer/End call button
	Speaker volume	Press the Volume up button
	Speaker volume	Press the Volume down button
	Mute speaker	Press the Mute speaker button
	Mute microphone	Press the Mute microphone button
	PC mode	Press three keys at the same time into PC mode, The status LED flashes 3 times
	Mobile mode	Press three keys at the same time into PC mode, The status LED flashes 6 times

3.3 LED Indicator

Blue: Wireless connection

Blinking blue : Wireless Connecting

All LED blinking: Battery low level

Green: Battery fully charged


Red: Battery charging


4. HOW TO USE SV13W

4.1 Charging for Preparation

SV13W is built in a rechargeable battery, use the supplied USB cable and the power adapter transmit power and start charging.

Power can be transmitted by connecting the product to either a computer or a commercial 5V USB power adapter.

 The product should be charged when first used. A full charge requires 2 to 3 hours using supplied power adapter.

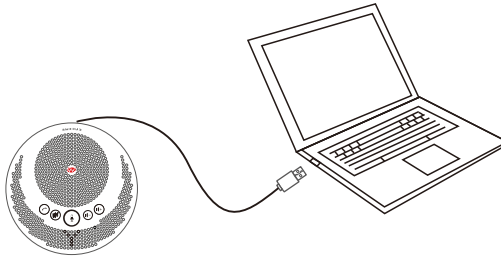


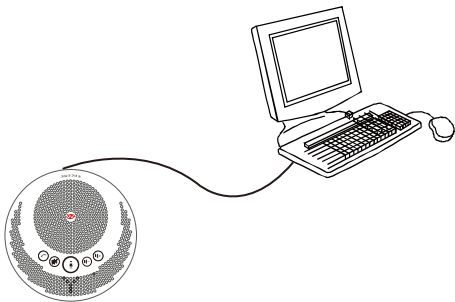
4.2 Connecting PC via Wireless

1. Insert the wireless adapter to the USB port of the PC.
2. Start the SV13W, after 5 seconds, the blue Y LED will keep on, and 2.4G Wireless connection is set up.
3. Wireless voice calls can now be made.

4.3 Connection Steps for USB

Connect the PC or video system to SV13W USB port with USB cable.
It will take a few seconds to install the driver automatically for the first setup.

 Note: Right-click the speaker icon at the bottom right of the PC screen and click “Sound”.
The “Sound” screen is displayed. Click the “Playback” and “Recording” tabs and check that “EACOME SV13” is set as the default device. If it is not set as the default device, click “EACOME SV13” and click “Set Default”.





4.4 IN/OUT Connection

Use a 3.5mm 4-strand cable to connect your phone or computer device to the "I/O" port of the phone.

If the device connection port is a 3.5mm 3-strand port, you need a transfer adapter for connecting. Insert audio transfer plug into the "I/O" port of SV13U. Connect the microphone "🎤" port and speaker "🎧" port of Audio Transfer plug to the IN/OUT port of the PC or video conferencing system with two 3.5mm 3-strand cable.

 Note: Please set the phone LINE IN/OUT mode to "PC Mode" when device is PC or video devices. Or set the phone LINE IN/OUT mode to "Mobile Mode" while connecting a smartphone.

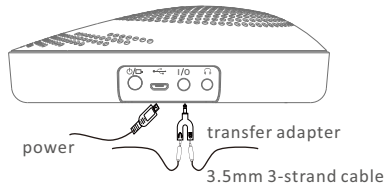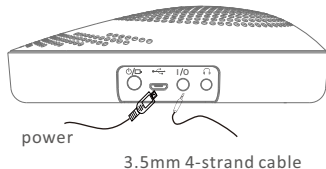

4.5 Multi-party Conference Call & Line Mode Selection

SV13W allows you to hold conference calls via analog LINE IN/OUT , USB VOIP simultaneously.


All above network will be mixed automatically. You can add another line or switch between connected lines during a call freely.

SV13W supports plug and play for the above kinds of lines conveniently.

It is no need to undertake any settings , anytime and anyway.

4.6 Daisy Chain Function

SV13W has daisy chain function. For meeting rooms larger than 30m², you can use the daisy chain function and link two SV13W, the microphone gather coverage can extend up to 8m, and the sound quality will be the same good.

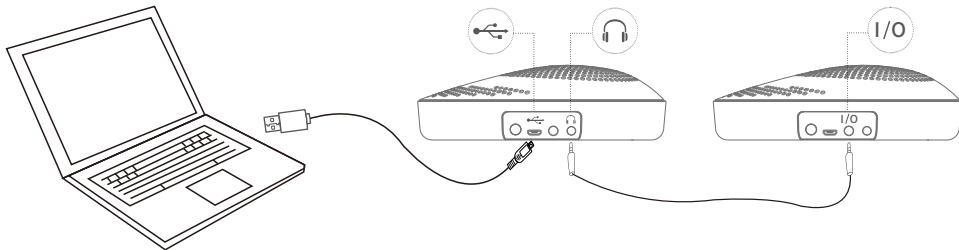

5. OTHER FUNCTIONS

5.1 Checking the Speaker Volume Level

The volume is 16 levels, the first level is the speaker mute, the 16th level is the maximum. The brightness of status LED will increase or decrease with the speaker volume up or down.

5.2 Checking the Battery Level

You can check the level of the built-in rechargeable battery power.

Press the power button () while the phone is on.

The brightness of the status LED varies with the level of the battery power .

The higher the battery power level, the brighter the status LED brightness.

 When all the buttons' LEDs are flashing the battery power battery is so low that it must be charged immediately.

6. HOW TO CARE FOR YOUR EACOME SPEAKERPHONE SV13W

Always store the EACOME speakerphone SV13W with the power off and safely protected. Avoid storage at extreme temperatures (above 70°C/158°F or below -20°C/-4°F). This can shorten battery life and may affect operation. High temperatures may also degrade performance.

Do not expose the EACOME speakerphone SV13W to rain or other liquids.



Eacome Electronics Co.,Ltd.

Address: Floor 15th, Baoneng Technology Building, Qingxiang Road, Longhua District, Shenzhen, China

Tel: +86-75586223352 ext 838 Mob: +86-13922832151

Email: Tylerzhou@eacome.cn Web: www.eacome.com

