



EACOME SPEAKERPHONE SV13U

USER MANUAL

CONTENTS

1. Welcome	1
EACOME professional speakerphone SV13U	1
2. Parts List	2
3. Getting to know your phone	3
3.1 Speakerphone overview	3
3.2 Keypad function	4
4. How to use SV13U	5
4.1 Charging for preparation	5
4.2 Connection steps for USB	6
4.3 IN/OUT connection	7
4.4 Multi-party conference call & line mode selection	8
4.5 Daisy chain function	9
5. Other functions	10
5.1 Checking the speaker volume level	10
6. How to care your EACOME speakerphone SV13U	11



1. WELCOME


Thank you for purchasing the EACOME professional speakerphone SV13U.
We hope you will enjoy it !

EACOME PROFESSIONAL SPEAKERPHONE SV13U

- Innovative and professional UC communicator for business video calls
- Ultra-wideband DSP processing delivers the great voice Quality
- Plug and play connectivity via USB and Line in/out
- Connect to your PC, tablet
- Compatible with Windows/MacOS and iOS/Android
- Compact and portable design
- User-friendly call controls and informations on the speakerphone

2. PARTS LIST

Included Accessories

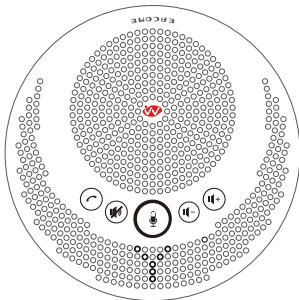

SV13U Phone



USB Cable





4-Strand 3.5mm Cable × 1







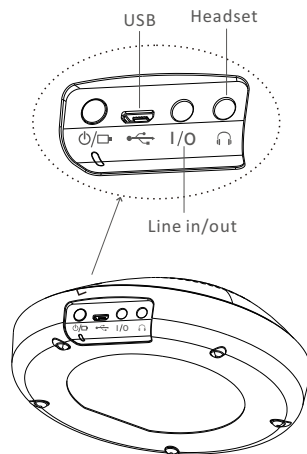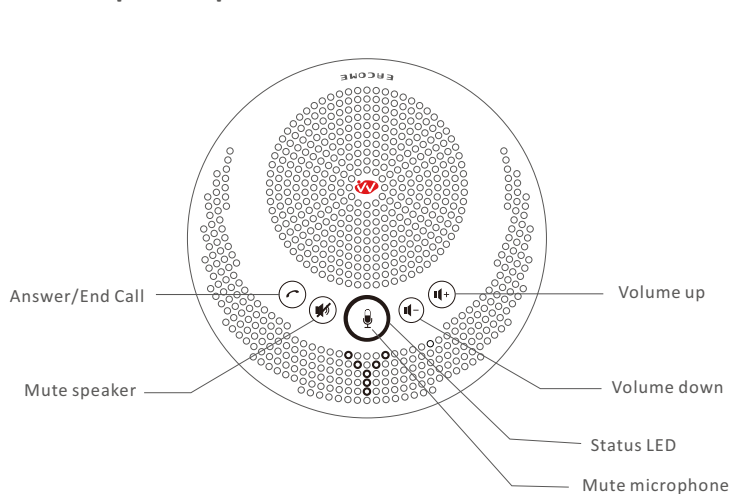


User Manual

3. GETTING TO KNOW YOUR PHONE

3.1 Speakerphone Overview



3.2 Keypad Function


	Answer/End call	Press the Answer/End call button
	Speaker volume	Press the Volume up button
	Speaker volume	Press the Volume down button
	Mute speaker	Press the Mute speaker button
	Mute microphone	Press the Mute microphone button
	PC mode	Press three keys at the same time into PC mode, The status LED flashes 3 times
	Mobile mode	Press three keys at the same time into PC mode, The status LED flashes 6 times

4. HOW TO USE SV13U

4.1 Charging for Preparation

Use the supplied USB cable start charging.


Power can be transmitted by connecting the product to a computer.

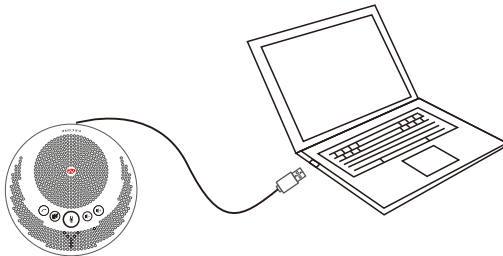


4.3 Connection Steps for USB

Connect the PC or video system to SV13U USB port with USB cable.

It will take a few seconds to install the driver automatically for the first setup.


 Note: Right-click the speaker icon at the bottom right of the PC screen and click “Sound”.
The “Sound” screen is displayed. Click the “Playback” and “Recording” tabs and check that “EACOME SV13” is set as the default device. If it is not set as the default device, click “EACOME SV13” and click “Set Default”.


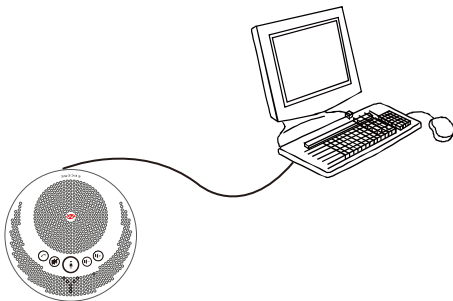


4.4 IN/OUT Connection

Use a 3.5mm 4-strand cable to connect your phone or computer device to the "I/O" port of the phone.

If the device connection port is a 3.5mm 3-strand port, you need a transfer adapter for connecting. Insert audio transfer plug into the "I/O" port of SV13U. Connect the microphone "🎤" port and speaker "🎧" port of Audio Transfer plug to the IN/OUT port of the PC or video conferencing system with two 3.5mm 3-strand cable.

 Note: Please set the phone LINE IN/OUT mode to "PC Mode" when device is PC or video devices. Or set the phone LINE IN/OUT mode to "Mobile Mode" while connecting a smartphone.

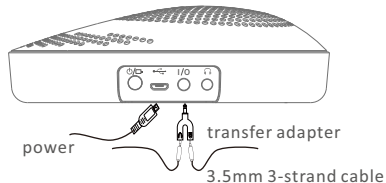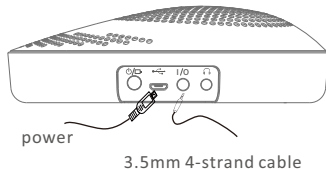

4.5 Multi-party Conference Call & Line Mode Selection

SV13U allows you to hold conference calls via analog LINE IN/OUT , USB VOIP simultaneously.


All above network will be mixed automatically. You can add another line or switch between connected lines during a call freely.

SV13U supports plug and play for the above kinds of lines conveniently.

It is no need to undertake any settings , anytime and anyway.

4.6 Daisy Chain Function

SV13U has daisy chain function. For meeting rooms larger than 30m², you can use the daisy chain function and link two SV13U, the microphone gather coverage can extend up to 8m, and the sound quality will be the same good.

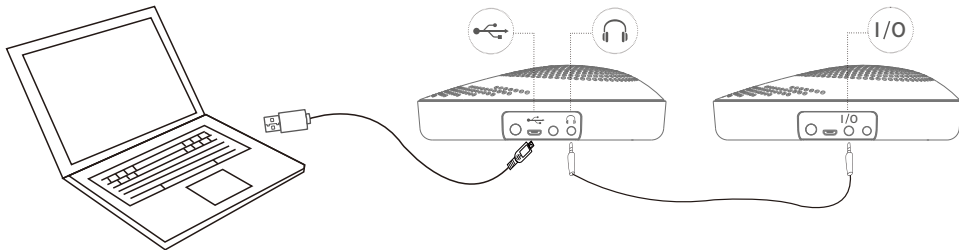

5. OTHER FUNCTIONS

5.1 Checking the Speaker Volume Level

The volume is 16 levels, the first level is the speaker mute, the 16th level is the maximum.
The brightness of status LED will increase or decrease with the speaker volume up or down.

6. HOW TO CARE FOR YOUR EACOME SPEAKERPHONE SV13U

Always store the EACOME speakerphone SV13U with the power off and safely protected. Avoid storage at extreme temperatures (above 70°C/158°F or below -20°C/-4°F). This can shorten battery life and may affect operation. High temperatures may also degrade performance.

Do not expose the EACOME speakerphone SV13U to rain or other liquids.



Eacome Electronics Co.,Ltd.

Address: Floor 15th, Baoneng Technology Building, Qingxiang Road, Longhua District, Shenzhen, China

Tel: +86-75586223352 ext 838 Mob: +86-13922832151

Email: Tylerzhou@eacome.cn Web: www.eacome.com

